



Raspberry Pi Camera User Manual

Selection Guide

Partnumber	Pixels	Sensor	Adjustable focus	Infrared LED Included	Angle of View (degree)	Manufacturer	Dimensions (mm)
RPi Camera	5 M	OV5647	x	x	72.4	element14	25x24x9
RPi Camera (B)	5 M	OV5647	√	x	75.7	-	32x32x22
RPi Camera (C)	5 M	OV5647	x	x	72.4	-	25x24x9
RPi Camera (E)	5 M	OV5647	x	√	72.4	Waveshare	25x24x6
RPi Camera (F)	5 M	OV5647	√	√	75.7	Waveshare	25x24x22
RPi Camera (G)	5 M	OV5647	√	↑	160	Waveshare	25x24x22

↑ indicates Infrared LED is supported but not included by default.

Contents

Raspberry Pi Camera User Manual.....	1
Selection Guide.....	1
1. Basic operations	2
2. Camera module setup.....	2
2.1 CONNECTING THE CAMERA.....	2
2.2 ENABLING THE CAMERA.....	2
2.3 USING THE CAMERA	3
3. Reference.....	3

1. Basic operations

- 1) Please download Raspbian OS from <http://www.raspberrypi.org/>
- 2) Format your TF card with the SDFormatter.exe.
Notices: The capability of TF card in used here should be more than 4GB. In this operation, a TF card reader is also required, which has to be purchased separately.
- 3) Start the Win32DiskImager.exe, and select the system image file copied into your PC, then, click the button **Write** to program the system image file.

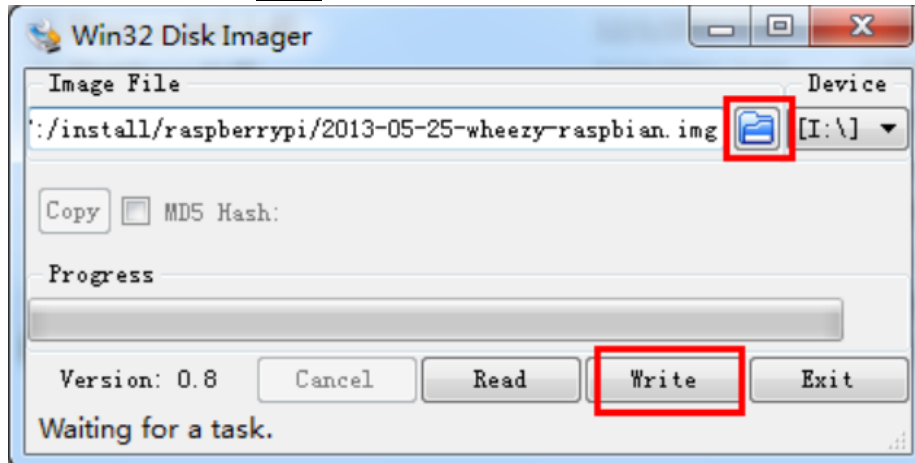


Figure 1: Programming the system image file with Win32DiskImager.exe

2. Camera module setup

2.1 CONNECTING THE CAMERA

The flex cable inserts into the connector situated between the Ethernet and HDMI ports, with the silver connectors facing the HDMI port. The flex cable connector should be opened by pulling the tabs on the top of the connector upwards then towards the Ethernet port. The flex cable should be inserted firmly into the connector, with care taken not to bend the flex at too acute an angle. The top part of the connector should then be pushed towards the HDMI connector and down, while the flex cable is held in place.

2.2 ENABLING THE CAMERA

- 1) Update and upgrade Raspbian from the Terminal:
`apt-get update`
`apt-get upgrade`
- 2) Open the raspi-config tool from the Terminal:
`sudo raspi-config`

- 3) Select **Enable camera** and hit **Enter**, then go to **Finish** and you'll be prompted to reboot.



Figure 2: Enable camera

2.3 USING THE CAMERA

Power up and take photos or shoot videos from the Terminal:

- 1) Taking photos:

```
raspistill -o image.jpg
```

- 2) Shooting videos:

```
raspivid -o video.h264 -t 10000
```

-t 10000 means the video last 10s, changeable.

3. Reference

Libraries for using the camera are available in:

- [Shell](#) (Linux command line)
- [Python](#)

More information:

<http://www.raspberrypi.org/camera>

<http://www.raspberrypi.org/archives/tag/camera-board>

<http://www.raspberrypi.org/archives/3890>